

TPA2017D2 Audio Power Amplifier EVM

Contents

1	Introduction	1
2	Operation	2
3	Schematic and Bill of Materials	3

List of Figures

1	EVM Schematic	3
2	Top Side Layout.....	4
3	Bottom Side Layout.....	4

List of Tables

1	Gain Settings	2
---	---------------------	---

1 Introduction

1.1 Description

The TPA2017D2 is a stereo, filter-free Class-D audio power amplifier with automatic gain control (AGC), dynamic range compression (DRC). The AGC and DRC functions enhance the perceived audio loudness, and at the same time prevent speaker damage from overdrive. Availability in the QFN package makes TPA2017D2 an ideal choice for laptop and portable applications. The TPA2017D2 evaluation module (EVM) is a complete, stand-alone audio board. It contains the TPA2017D2 QFN (RTJ) Class-D audio power amplifier.

The TPA2017D2 evaluation module (EVM) is a complete stand-alone audio board. All components are Pb-free.

1.2 TPA2017D2EVM Specifications

Supply voltage range, V_{DD}	4.5 V to 5.5 V
Supply current, I_{DD}	1 A, maximum
Speaker amplifier output power per channel, P_O : 4Ω , $V_{DD} = 5\text{ V}$, THD+N = 1%	2 W

2 Operation

2.1 Quick-Start List for Stand-Alone Operation

2.1.1 Speaker Amplifier

Follow these steps to use the TPA2017D2EVM stand-alone or when connecting it into existing circuits or equipment. Connections to the EVM can be made by inserting stripped wire or using banana plugs for the power supply and output connections. The inputs accept standard RCA plugs.

2.1.2 Power Supply

1. Ensure that all external power sources are set to OFF.
2. Connect an external regulated power supply adjusted to 5 V to the module VDD and GND banana jacks, taking care to observe marked polarity.

2.1.3 Evaluation Module Preparations

Inputs and Outputs

1. If connecting to a fully differential input or a grounded input (the shield of the RCA is GND), remove jumpers JP1 and JP2 from the EVM. If connecting to a floating source like a portable CD, install jumpers JP1 and JP2. After setting the JP1 and JP2 jumpers appropriately, connect the input source to the speaker left and right inputs (INL and INR) .
2. Connect a speaker across OTR+ and OTR-. Connect another speaker across OUTL+ and OUTL-.

Control Inputs

1. **Enable:** Hold down switch EN to place the amplifier in shutdown. Release EN to reactivate the amplifier.
2. **AGC1/AGC2:** Together, these terminals determine the AGC setting of the amplifier. See [Table 1](#). Installing the jumpers in position 0 sets the respective terminal to GND. Installing the jumpers in position 1 sets the respective terminals to VDD.

Table 1. Gain Settings

AGC1	AGC2	Function
0	0	AGC Function disabled
0	1	AGC Limiter Function enabled
1	0	AGC, Limiter, and Compression Functions enabled
1	1	AGC, Limiter, Compression, and Noise Gate Functions enabled

2.1.4 Power Up

1. Verify correct voltage and input polarity, and turn on the external power supplies. The EVM should begin operation.
2. Adjust the input signal.
3. Adjust the control inputs to the desired settings.
4. Adjust the amplifier AGC setting by installing/removing the jumpers, AGC1 and AGC2.

3 Schematic and Bill of Materials

3.1 TPA2017D2EVM Schematic

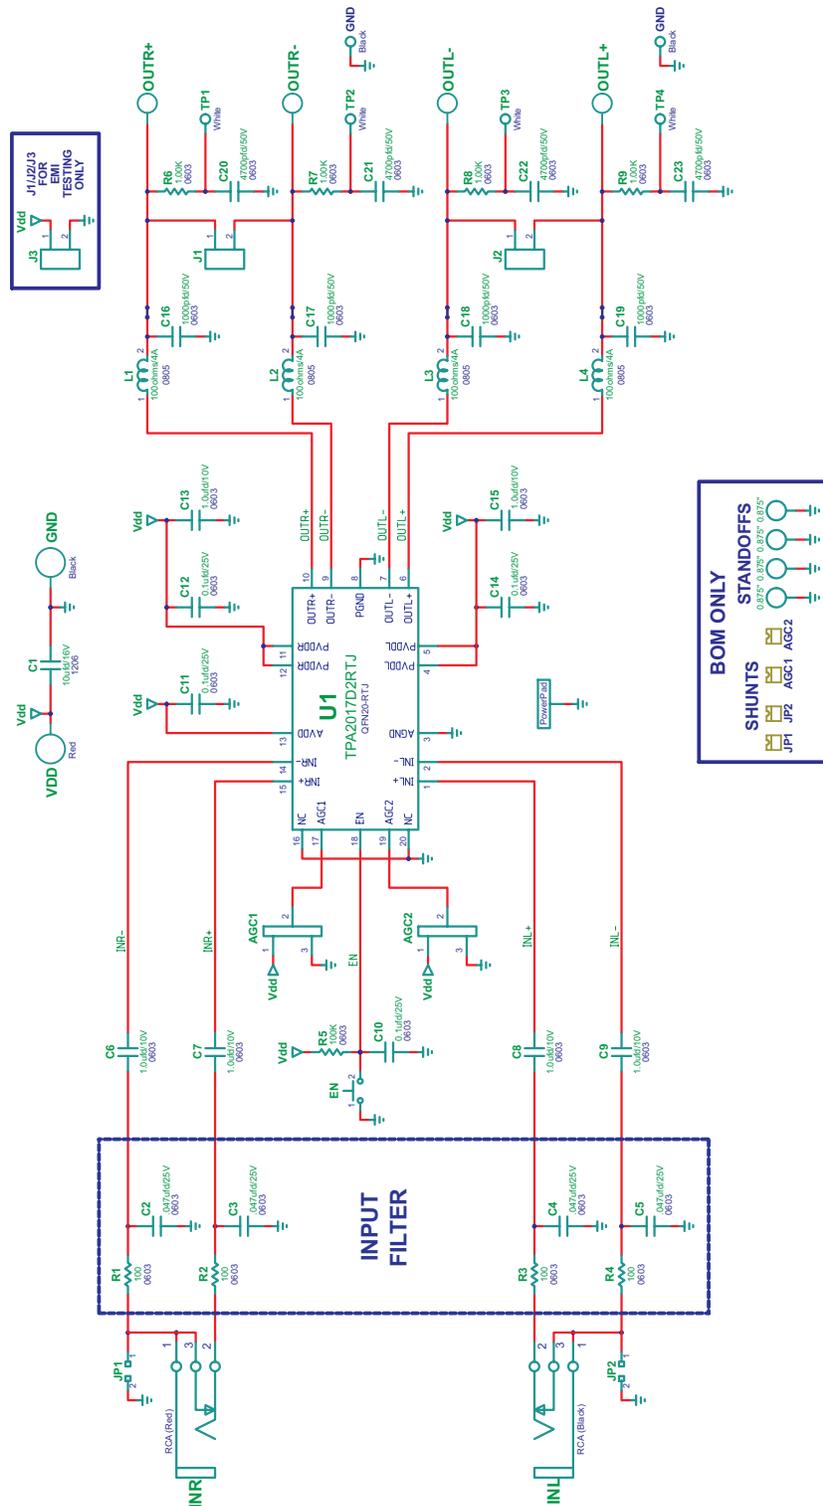


Figure 1. EVM Schematic

3.2 TPA2017D2EVM PCB Layers

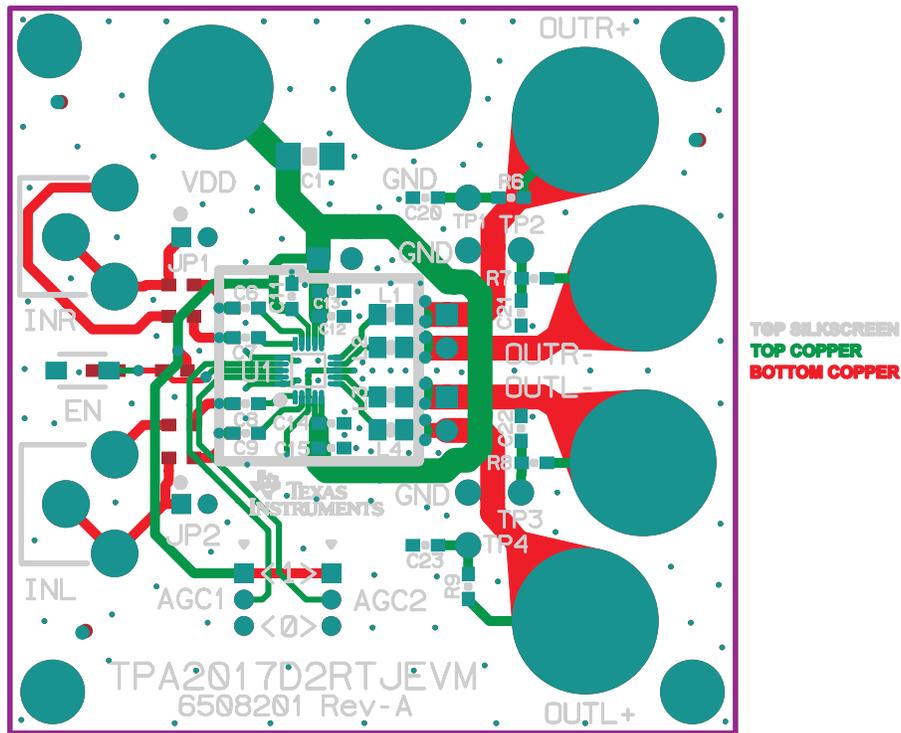


Figure 2. Top Side Layout

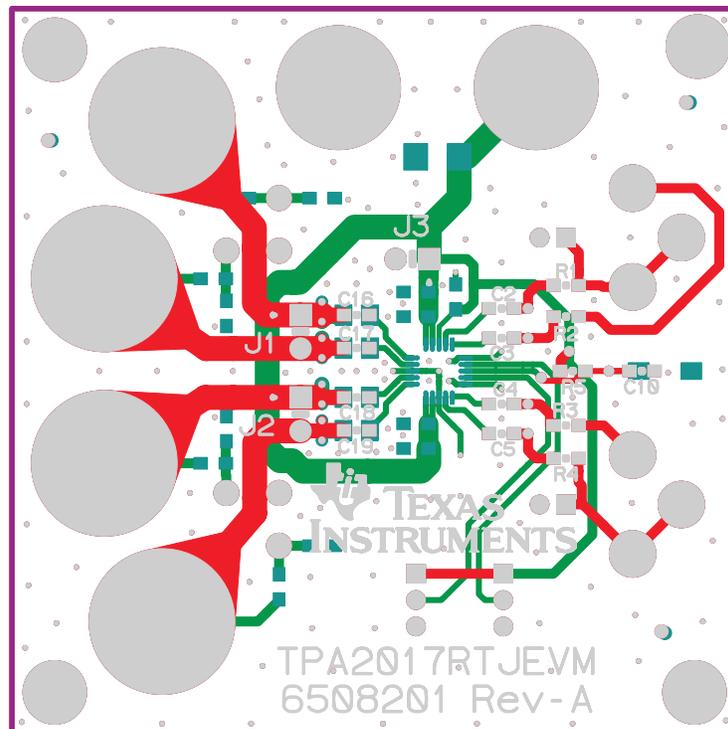


Figure 3. Bottom Side Layout

3.3 TPA2017D2EVM Bill of Materials

Description	RefDes	QTY	MFG	MFG Part#	Vendor	Vendor Part#
TI-SEMICONDUCTORS						
Stereo AGC Class-D amplifier	U1	1	TEXAS INSTRUMENTS	TPA2017D2RTJ	TEXAS INSTRUMENTS	TPA2017D2RTJ
Description	RefDes	QTY	MFG	MFG Part#	Vendor	Cut Tape Part#
CAPACITORS						
CAP 1000PF 50V CERM 0603 COG ROHS	C16, C17, C18, C19	4	TDK CORP.	C1608C0G1H102J	DIGI-KEY	445-1293-2
CAP 4700PF 50V CERM 0603 X7R	C20, C21, C22, C23	4	PANASONIC	ECJ-1VB1H472K	DIGI-KEY	PCC1780TR
CAP .047UF 25V CERM 0603 X7R ROHS	C2, C3, C4, C5	4	PANASONIC	ECJ-1VB1E473K	DIGI-KEY	PCC1771TR
CAP 0.1UF 25V CERM 0603 X5R ROHS	C10, C11, C12, C14	4	PANASONIC	06033D104KAT2A	DIGI-KEY	478-1244-2
CAP 1.0UF 10V 10% CERM 0603 X5R ROHS	C6, C7, C8, C9, C13, C15	6	PANASONIC	ECJ-1VB1A105K	DIGI-KEY	PCC2174TR
CAP 10UF 16V 10% CERM 1206 X5R ROHS	C1	1	KEMET	C1206C106K4PACTU	DIGI-KEY	399-5091-2
RESISTORS						
RES 100 OHM 1/10W 1% SMD 0603 ROHS	R1, R2, R3, R4	4	VISHAY	CRCW0603100RFKEA	DIGI-KEY	541-100HTR
RES 1.00K OHM 1/16W 1% SMD 0603	R6, R7, R8, R9	4	PANASONIC	ERJ-3EKF1001V	DIGI-KEY	P1.00KHTR
RES 100K OHM 1/10W 5% SMD 0603 ROHS	R5	1	PANASONIC	ERJ-3GEYJ104V	DIGI-KEY	P100KGTR
FERRITE BEADS						
FERRITE BEAD, 100 Ohms 4A 100MHz SM0805	L1, L2, L3, L4	4	TDK CORPORATION	MPZ2012S101A	DIGI-KEY	445-1567-2
HEADERS AND JACKS						
HEADER, 2 PIN MALE, PCB STRAIGHT GOLD ROHS	J1, J2, J3	3	SULLINS	PBC02SAAN	DIGI-KEY	S1011E-02
HEADER 2 PIN, PCB 2.0MM ROHS	JP1, JP2	2	NORCOMP	26630201RP2	DIGI-KEY	2663S-02
HEADER 3 PIN, PCB 2.0MM ROHS	AGC1, AGC2	2	NORCOMP	26630301RP2	DIGI-KEY	2663S-03
JACK, RCA, PCB-RA, BLACK	INL	1	SWITCHCRAFT	PJRN1X1U01	NEWARK	16C1858
JACK, RCA, PCB-RA, RED	INR	1	SWITCHCRAFT	PJRN1X1U03	NEWARK	16C1860
TESTPOINTS AND SWITCHES						
PC Testpoint, Black	GND, GND	2	KEYSTONE ELECTRONICS	5001	DIGI-KEY	5001K
PC Testpoint, White	TP1, TP2, TP3, TP4	4	KEYSTONE ELECTRONICS	5002	DIGI-KEY	5002K
Switch, Momentary SMT-Short, Black Tab, 240g	EN	1	PANASONIC	EVQ-PPDA25	DIGI-KEY	P8087STR
BINDING POSTS						
BINDING POST, 15A, UNINSULATED	OUTL-, OUTL+, OUTF-, OUTF+	4	JOHNSON COMPONENTS	111-2223-001	DIGI-KEY	J587
BINDING POST, BLACK, 15A ECONO	GND	1	KEYSTONE ELECTRONICS	7007	DIGI-KEY	7007K
BINDING POST, RED, 15A ECONO	VDD	1	KEYSTONE ELECTRONICS	7006	DIGI-KEY	7006K
SHUNTS						
SHUNT, BLACK AU FLASH 2 MM ROHS	JP1, JP2, AGC1, AGC2	4	NORCOMP INC.	810-002-SP2L001	DIGI-KEY	SP2-001E
STANDOFFS AND HARDWARE						
Hex Nut, 4-40, Zinc/Steel	HW1, HW2, HW3, HW4	4	BUILDING FASTENERS	HNZ440	DIGI-KEY	H216
Standoff 4-40 Threaded M/F 0.50 in. ALUM-HEX	HW1, HW2, HW3, HW4	4	KEYSTONE ELECTRONICS	8401	DIGI-KEY	8401K
Component Count: 71						

EVALUATION BOARD/KIT IMPORTANT NOTICE

Texas Instruments (TI) provides the enclosed product(s) under the following conditions:

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. Persons handling the product(s) must have electronics training and observe good engineering practice standards. As such, the goods being provided are not intended to be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety and environmental measures typically found in end products that incorporate such semiconductor components or circuit boards. This evaluation board/kit does not fall within the scope of the European Union directives regarding electromagnetic compatibility, restricted substances (RoHS), recycling (WEEE), FCC, CE or UL, and therefore may not meet the technical requirements of these directives or other related directives.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. **THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.**

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge.

EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

TI currently deals with a variety of customers for products, and therefore our arrangement with the user **is not exclusive.**

TI assumes **no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.**

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please contact the TI application engineer or visit www.ti.com/esh.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used.

FCC Warning

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

EVM WARNINGS AND RESTRICTIONS

It is important to operate this EVM within the input voltage range of 4.5 V to 5.5 V and the output voltage range of 0 V to 5.5 V.

Exceeding the specified input range may cause unexpected operation and/or irreversible damage to the EVM. If there are questions concerning the input range, please contact a TI field representative prior to connecting the input power.

Applying loads outside of the specified output range may result in unintended operation and/or possible permanent damage to the EVM. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative.

During normal operation, some circuit components may have case temperatures greater than 85°C. The EVM is designed to operate properly with certain components above 85°C as long as the input and output ranges are maintained. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors. These types of devices can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during operation, please be aware that these devices may be very warm to the touch.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright 2008, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products

Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
RF/IF and ZigBee® Solutions	www.ti.com/lprf

Applications

Audio	www.ti.com/audio
Automotive	www.ti.com/automotive
Broadband	www.ti.com/broadband
Digital Control	www.ti.com/digitalcontrol
Medical	www.ti.com/medical
Military	www.ti.com/military
Optical Networking	www.ti.com/opticalnetwork
Security	www.ti.com/security
Telephony	www.ti.com/telephony
Video & Imaging	www.ti.com/video
Wireless	www.ti.com/wireless

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2009, Texas Instruments Incorporated